KEYBOARD INSTALLATION:

1. LAY THE KEYBOARD MOUNT BRACKET FACE DOWN. PLACE BLACK SPACER PLATE ON THE BOTTOM OF THE ASSEMBLY AND ALIGN HOLES WITH EXISTING NUT INSERTS.

2. PLACE GRAY PLASTIC SLIDE PLATE ON SPACER AND POSITION SIX MOUNTING HOLES AS DESIRED. ATTACH WITH (4) OR (6) #8-32 5/8" FLAT HEAD MACHINE SCREWS SUPPLIED.

3. TURN KEYBOARD MOUNT BRACKET OVER AND ATTACH GASKET TO MOUNT BRACKET, COVERING THE EXPOSED HARDWARE.

4. PLACE THE KEYBOARD ONTO MOUNT BRACKET. ATTACH TAB WITH INCLUDED HARDWARE, SLIDE TAB TO RETAIN THE KEYBOARD TO THE MOUNT BRACKET AND TIGHTEN HARDWARE.

SLIDE RECEIVER

5. THE SLIDE GUIDE BRACKET HAS A TAB FOR SLIDE TENSION. IT CAN BE BENT TOWARDS OR AWAY FROM THE PLASTIC SLIDE TO TIGHTEN OR LOOSEN THE SLIDE TENSION.

6. ATTACH SLIDE GUIDE TO THE TILT / SWIVEL WITH #8-32 X ½" FLAT HEAD SCREWS AND NUTS SUPPLIED.

7. SLIDE THE KEYBOARD ASSEMBLY INTO THE SLIDE GUIDE BRACKET AND POSITION AS DESIRED.

REV.	DESCRIPTION	DATE
11-14	CONVERTED FROM PHOTO INST	11/5/2014

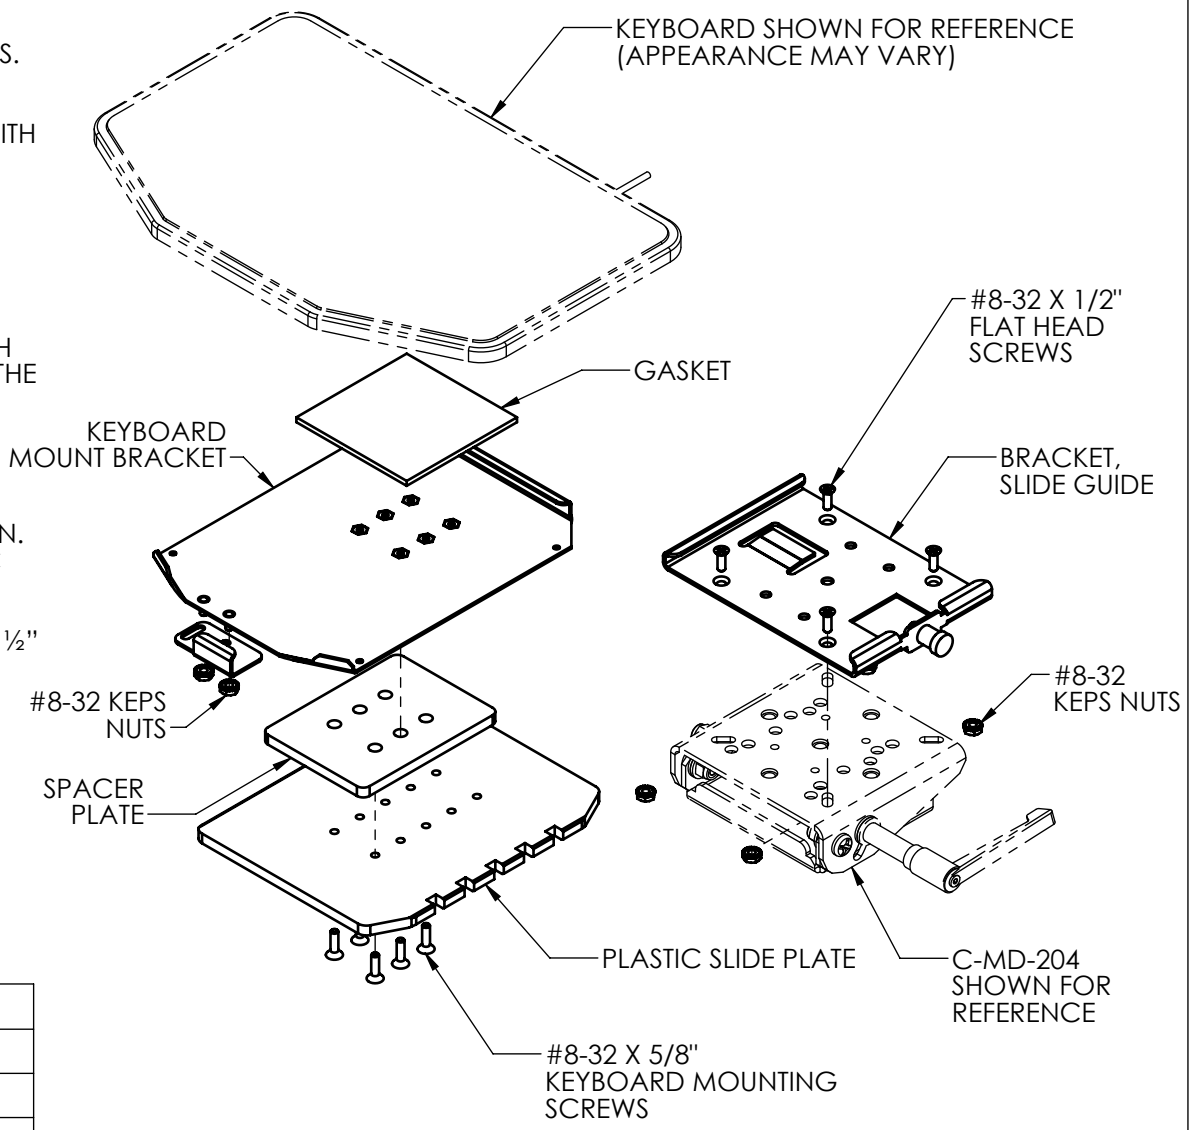

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	1-C990825A-001	BRACKET, SLIDE GUIDE
2	1	1-C990825A-002	PLATE, PVC SLIDE KEYBOARD MOUNT
3	1	1-C990825A-003	PLATE, SPACE, KEYBOARD MOUNT
4	1	10-002086	GASKET, COVER, C-3329
5	1	10-005605	CLIP, LT, IKEY KBD MT
6	1	10-005671	BRKT, IKEY KBD MT., SLIM
7	6	GSM30027	NUT 8-32 KEPS ZP
8	4	GSM33082	SCREW, 8-32 X 1/2, PFHMS, ZP
9	6	GSM33092	SCREW, 8-32 X 5/8, PFHMS, ZP

HAVIS HAVIS, INC. 75 JACKSONVILLE RD, WARMINSTER, PA. 18974 1-800-524-9900

TITLE: INSTALLATION INSTRUCTION, KEYBOARD MOUNT, C-KBM-108

DO NOT SCALE DRAWING

SIZE	DWG. NO.	REV
A	C-KBM-108-INST	11-14

WEIGHT (LB): 4.54704607 | SCALE: 1:4 | SHEET 1 OF 1